

MobileDemand Technical Support Bulletin

Bulletin #: 20070327

Subject: Touch Screen Driver Update





Following are instructions for updating the touch screen driver in an xTablet T8600. If you don't have internet access on your xTablet you can download the file on your office computer. Then you can transfer the .zip file from your computer to each of your xTablets via a USB drive or compact flash card.

- 1) Make sure that the tablet is in digitizer mode (pushing **Fn+0** on the numeric keypad at the same time switches between touch screen and digitizer mode; it will briefly flash the mode in the lower portion of the screen when switched. If it displays "Touchscreen Mode" then repeat to display "Digitizer Mode"
- 2) Uninstall the old TouchSet Driver, Tap **Start – All Programs – TouchSet Touch Panel – Uninstall**





Choose Yes to confirm that you want to completely remove the TouchSet Touch Panel Driver.

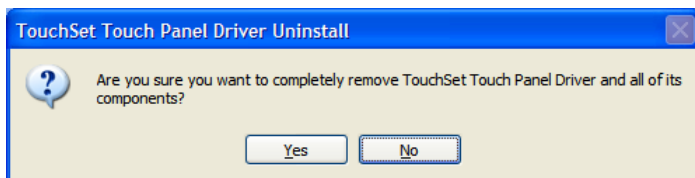

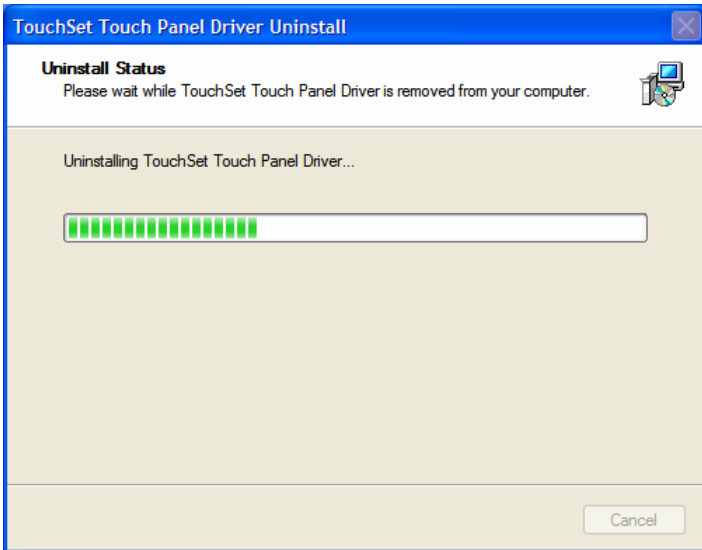


- 3) After the uninstall, press OK and then restart the tablet
- 4) Go to www.mobiledemand.com – **Support** – **Technical Support**
- 5) Click on **TouchScreen_V2** link and save the **.zip** file to **C:\Drivers\TouchScreen** (Here you could save the file to your USB or compact flash card instead to transfer this file to each of your xTablets.)
- 6) Right click on the **TouchScreen_V2.zip** folder and **Extract all** into the default folder **C:\Drivers\TouchScreen\TouchScreen_V2**

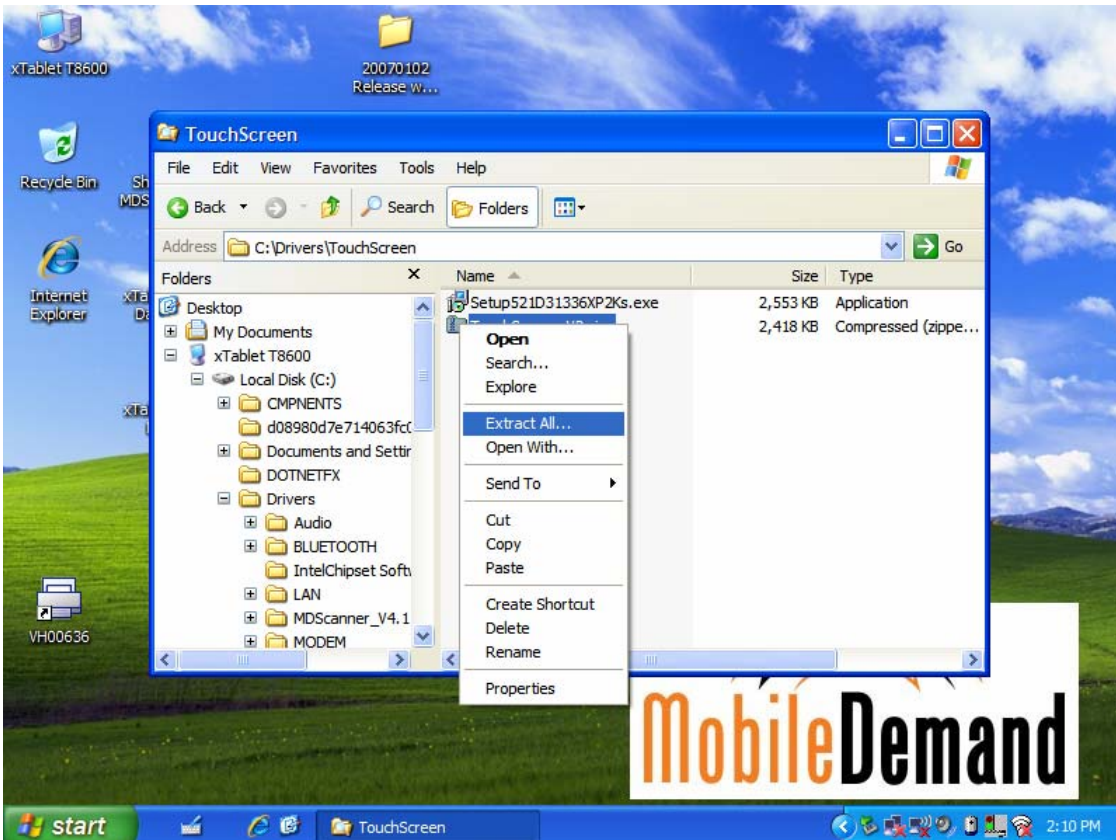


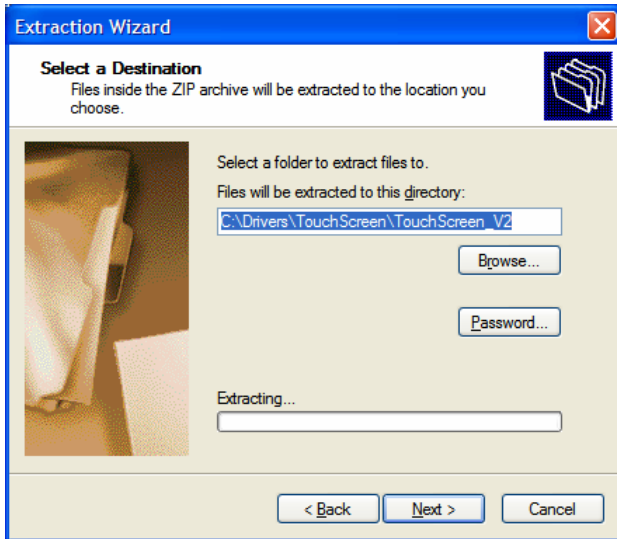

7) Run (by double clicking) the **Setup521D314XP2K.exe** file that is inside **C:\Drivers\TouchScreen\TouchScreen_V2**

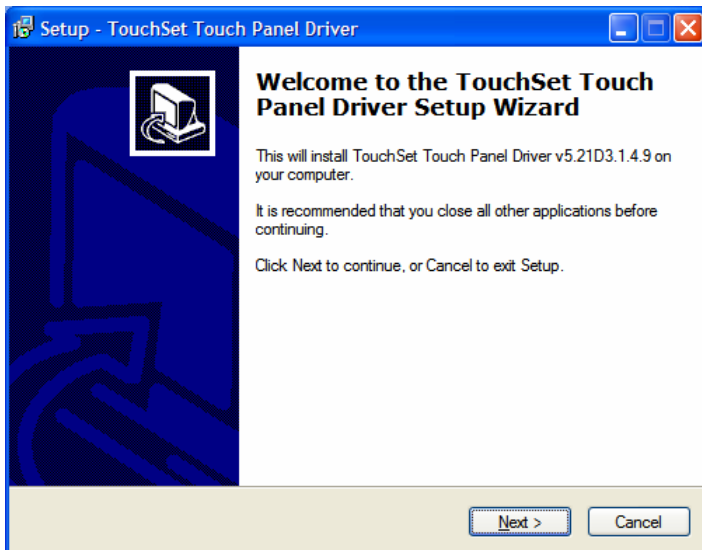

- 8) Accept all defaults by pressing next
- 9) Close the program once it has completed and restart the tablet
- 10) Double click on the **TouchSet Utility** shortcut on the desktop
- 11) Select the **Calibration** tab

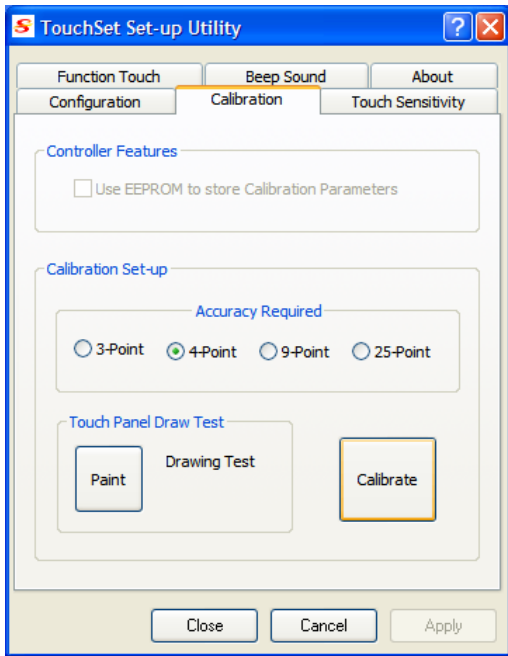

- 12) Switch back to touch screen mode by pressing **Fn + 0**
- 13) Click the Calibrate button
- 14) Press in the middle of each **X** with your stylus, which will repeat on each corner of the screen
- 15) Close the **TouchSet Set-up Utility** window
- 16) If you were using digitizer previously, switch back to digitizer mode by pressing **Fn+0**

If there are any further questions, please do not hesitate to call MobileDemand at 319-363-4121, or e-mail us at support@mobiledemand.com.